

**National**



**VHS**

# **EASY OPERATION**

**NV-7000-A**

**Video Cassette Recorder**

**Matsushita Electric Trading Co., Ltd.**  
P.O. Box 288, Central Osaka Japan

 
Printed in Japan  
VQC0198

F0780M0-1000

## How to insert and remove cassette


### To Insert:

1. Touch Eject Button
2. Insert Cassette
3. Press Carrier Down

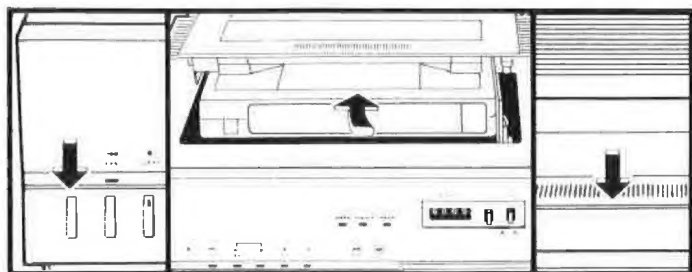

### To Remove:

 1. Touch Eject Button
2. Remove Cassette
3. Press Carrier Down

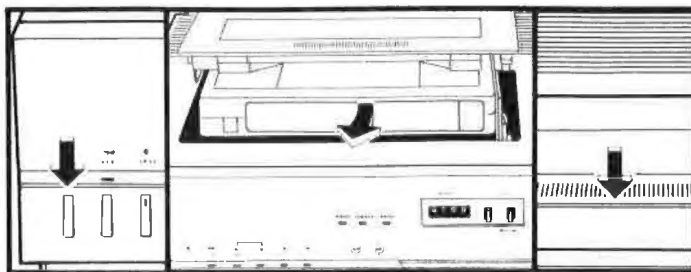

#### Note:

Power must be turned ON in order to operate the eject mechanism.

 
 
#### Caution:

The video cassette can only be used with the window side up, and arrow pointing away from you.

Do not attempt to insert a cassette which is upside down or backwards.

- 1 -

## How to record the programme you're watching

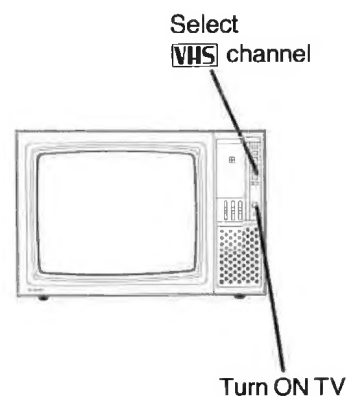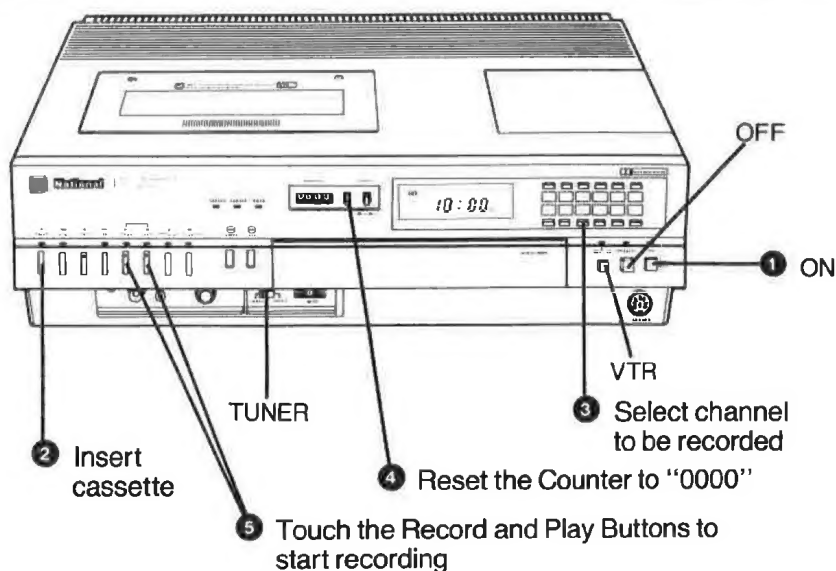

### RECORDING ONE TV PROGRAMME WHILE WATCHING ANOTHER

 
- If you wish to view another programme during recording, set the VTR/TV Selector to "TV" (indicator lamp extinguishes), and select the desired channel on the TV.
- If you want to watch (monitor) the programme being recorded, set the VTR/TV Selector to "VTR" (indicator lamp will illuminate), and tune TV receiver to the **VHS** channel.

#### Caution:

Unauthorized recording of copyrighted television programmes, films, video tapes and other materials may infringe the right of copyright owners and be contrary to copyright laws.

- 2 -

# How to set the timer to the present time

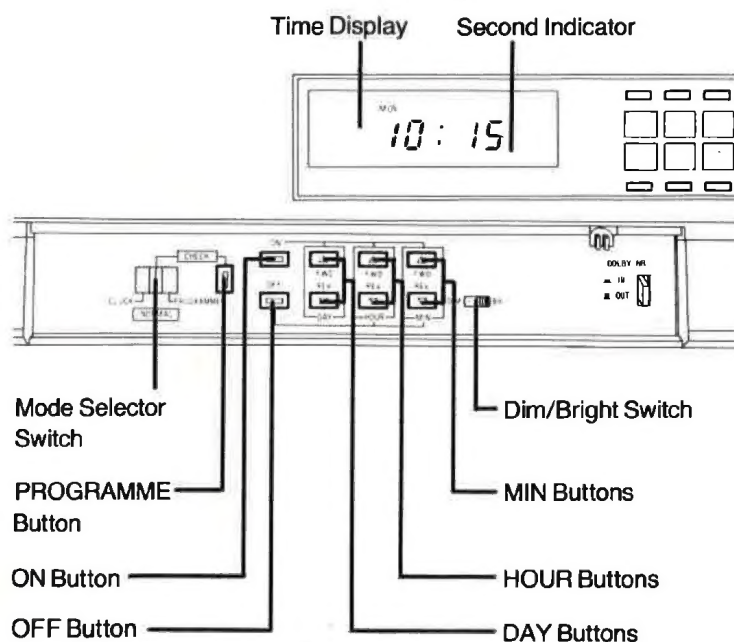

**Caution:**  
Unauthorized recording of copyrighted television programmes, films, video tapes and other materials may infringe the right of copyright owners and be contrary to copyright laws.

## ●Set the timer

1. VTR Switch to ON.
2. Timer Rec Switch to OFF.
3. Switch the Mode Selector to "CLOCK" and set the correct present day and time by pushing FWD or REV of DAY, HOUR, and MIN Buttons.  
For example, if the current time is 10:14 and 40 seconds AM on Monday, first set the time to AM 10:15.
4. When the present time becomes 10:15 and 0 second AM, switch the Mode Selector to "NORMAL", the timer is then set correctly and starts normal clock operation.

This timer is a 24-hour type digital indicator.

-3-

## ■ How to record when you're not at home

Make sure that the timer indicates the present time correctly and the VTR Switch is ON and the Timer Rec Switch is OFF.

### ●Unattended recording:

1. Input Signal Selector to TUNER.
2. Insert cassette.
3. Set the starting time:
  - (1) Switch the Mode Selector to "PROGRAMME".
  - (2) Push the PROGRAMME Button and determine number of the desired preset programme.
  - (3) Push the ON Button.
  - (4) Set up the starting time of recording by pre-setting DAY, HOUR, MIN Buttons.
4. Set the stop time:  
Push the OFF Button and set up the stop time of recording by presetting HOUR, MIN Buttons.
5. Push the desired channel button to be recorded.
6. Push the PROGRAMME Button to select the next programme and repeat 3 (3)~5 only if further recordings are required.
7. Turn the Mode Selector to "NORMAL" and set the Timer Rec Switch to ON.

### ●How to record a TV programme at the same time every day:

Switch the Mode Selector to PROGRAMME.  
Push the PROGRAMME Button and ON Button, and then push the REV of DAY Button.  
Follow the same steps of 3 (4)~5 & 7 for HOUR, MIN and CHANNEL.

### ●How to record a TV programme at the same time every week:

Press the PROGRAMME Button until "W" lights up.  
Follow the same steps of 3 (3)~5 & 7.

#### Note:

 
Every-day, every-week recordings will continue to record TV programmes as long as the Timer Rec Switch is set to ON.

### ●To check programming:

The Mode Selector to "NORMAL". (VTR Switch to ON.) Push the PROGRAMME Button and select the programme number which you wish to check, then each starting/stop time appears for 4 seconds.  
You can check programming when the Timer Rec Switch is ON, too, without regard to position of the Mode Selector.


-4-

## How to playback

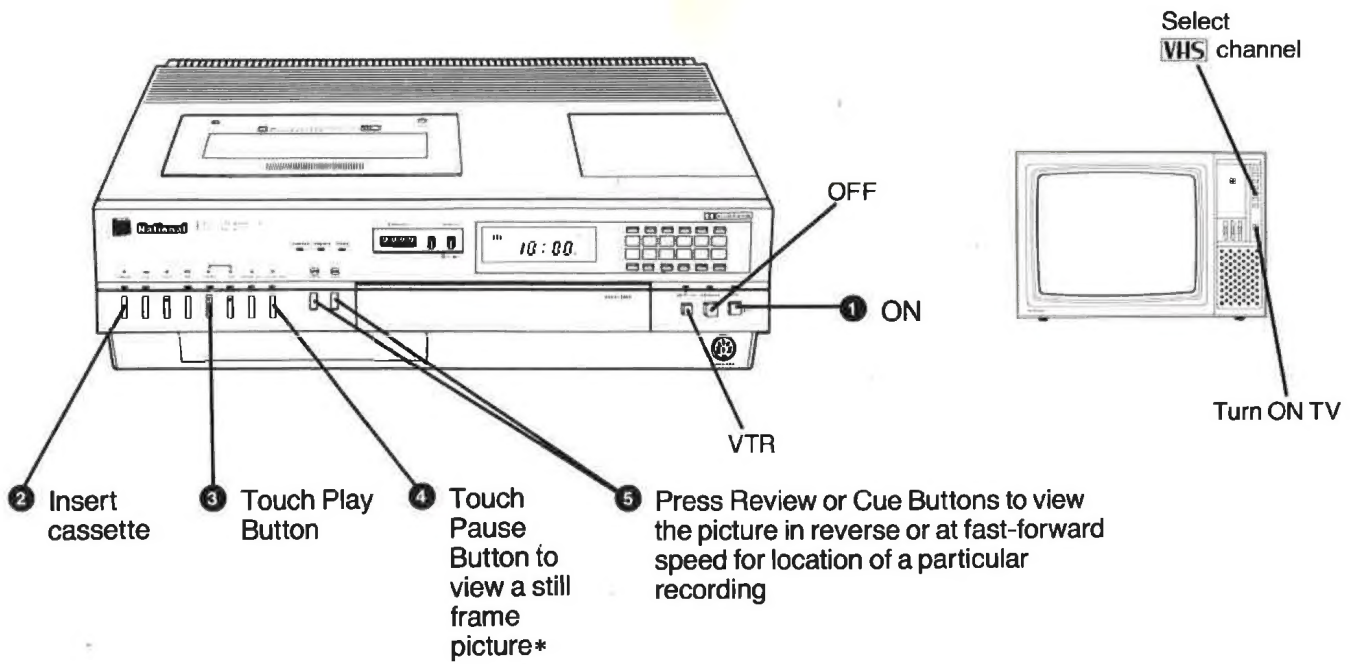

-5-

## How to watch TV only

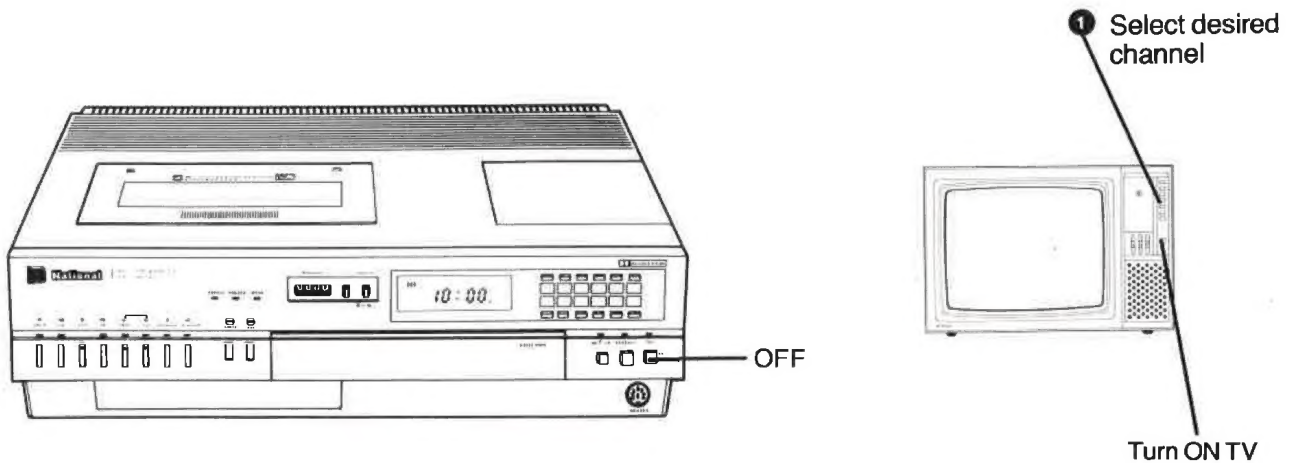 

-6-



**National**



**VHS**

# EASY OPERATION

**NV-7000-A**

Video Cassette Recorder

**Matsushita Electric Trading Co., Ltd.**  
P.O. Box 288, Central Osaka Japan

Printed in Japan  
VQC0198

F0780M0-1000